



Works Car Baseline Set Up Race (sr8)

Every works car to be sent with this set up. (unless customer has specified there preferences)

Camber		
-3.7	↑	-3.7
-1		-1

Toes		
3mm OUT	↑	3mm OUT
4mm IN		4mm IN

Dampers		Springs/Preload		Dampers		
Bump:	+7	110/100 +3	FARB	110/100 +3	Bump:	+7
Bump HS:	+10		Soft 15.8mm		Bump HS:	+10
Rebound:	+30		Medium 19mm		Rebound:	+30
Packer Gap:	6mm		Hard 22.2mm		Packer Gap:	6mm
			X Hard 22.2mm black			

Corner weights/ Ride Height	
	Front diffuser H
	40mm
	↑
	Cross%
	Total weight kg
	Rake mm
	12mm

Dampers		RARB		Dampers		
Bump:	+6	100/100	Soft 12.7mm	100/100	Bump:	+6
Bump HS:	+20		Medium 15.8mm		Bump HS:	+20
Rebound:	+25		Hard 19mm		Rebound:	+25
			X Hard 22.1mm			
			Super hard 22.1 black			


Dive planes:	1	Tyre Pressure (cold)(Hot)	
		22	22
		27	27
		↑	
		22	22
		29	29

PADS

--

SR8 Gearing	
Short	
Medium	
Long	
X long	

Rear bi wing

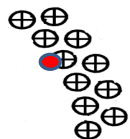

PADS

--

SR3 Gearing	
3.409	
3.235	
3.071	
2.917	

SR1 Gearing	
FRONT	REAR

Comments
Spa and monza 31 psi rear

.....

.....

.....

.....